



# EVE/NET Remote User Manual

A Networked Remote Control System for the Eventide  
Orville™ and DSP7000 family of Ultra-Harmonizers®

**User Manual    Release 1.1**

Requires version 2.705 or higher operating system.

Part No:141044

©2000-2005 Eventide Inc. Little Ferry NJ 07643 USA

Harmonizer is a registered trademark of Eventide, Inc. for its audio special effects devices incorporating pitch shift.

This page intentionally left  
blank.

©2000 Eventide Inc. Little Ferry NJ 07643 USA

Harmonizer is a registered trademark of Eventide, Inc. for its audio special effects devices incorporating pitch shift.

# EVE/NET Remote User Manual

The EVE/NET Network Remote Control System is a sophisticated approach to controlling multiple audio processing units. It allows essentially any number of small remote control units to select from and control essentially any number of rack mounted Eventide Harmonizer Brand effects units.



Currently the H8000™ and H8000A are supported, as well as the Orville™, DSP7000 and DSP7500. All controlled units can be connected via a single cable over a range that can exceed one thousand feet.

A single remote can be connected to a single H8000 by simply connecting the supplied RJ45 cable, but more complex systems require installation by a knowledgeable technician. This is covered in detail in Appendix B.

## Table of Contents

<b>General Principles</b> .....	3
<i>Unit Numbers</i> .....	3
<i>Nodes</i> .....	3
<i>Masters and slaves</i> .....	3
<i>Setting up H8000 for EVE/NET</i> .....	4
<b>Using one H8000 to control another</b> .....	5
<b>Extra controller options with EVE/NET</b> .....	6
<b>Making Connections to the Remote</b> .....	7
<b>The Remote Panel</b> .....	7
<i>UNIT button</i> .....	8
<i>UNIT indicators</i> .....	8
<i>USER key</i> .....	9
<i>Encoder Knobs</i> .....	9
<i>Encoder Buttons</i> .....	10
<i>Loading Setups on H8000 using the Encoder Buttons.</i> .....	10
<i>Using a Joystick</i> .....	10
<i>Using MIDI with the remote</i> .....	11
<b>Configuring the remote</b> .....	11
<i>Initialize</i> .....	11
<i>Display</i> .....	11
<i>Set Range</i> .....	11
<i>Joysticks</i> .....	12
<i>Panel Test</i> .....	12
<i>MIDI Loop</i> .....	12
<b>Rear panel connections</b> .....	13
<b>Installation</b> .....	14
<i>Range Settings</i> .....	14
<i>Cabling</i> .....	14

# EVE/NET Remote User Manual

*Termination* ..... 15  
*Power* ..... 15  
*Grounding* ..... 16

# EVE/NET Remote User Manual

## General Principles

- Any EVE/NET system comprises one or more *remotes*, as well as one or more controlled rack mounted effects units. For readability, these will be referred to as *H8000s* in the following text, although they may in fact be Orvilles, members of the DSP7000 family or other units.
- The system may also include various interface devices and power supplies. These are all connected together via a common cable.
- An EVE/NET system comprising one H8000 and one remote is known as a *simple system*.  
☞ See Appendix B for installation information.
- Any given H8000 may be controlled by any number of remotes. Similarly, a given remote can control multiple H8000s in parallel.

## Unit Numbers

Each controlled effects unit must have a *unit number*. This is a number from one to four that is used to identify the controlled H8000. More than one H8000 may have the same unit number - in this case, when selected by a remote they will be driven in parallel (sent the same commands). In addition, H8000s with the same unit number may control each other if suitably configured. A remote determines which H8000(s) it will control according to the unit number selected on its panel.

## Nodes

Any functioning *H8000*, *remote* or *interface adaptor* on an EVE/NET network is known as a *node* and can communicate with any other functioning *node* on the same network.

## Masters and slaves

A *master* node is one that can control one or more other nodes. A *slave* node is one that can be controlled. By definition, a *remote* is a master, and an H8000 can be either or both a master and a slave.


# EVE/NET Remote User Manual

## Setting up H8000 for EVE/NET

A *simple system* requires no configuration at either end if both the remote and the H8000 are set to their default values.

➤ *Appendix B for installation information.*

➤ *H8000 User Manual.*

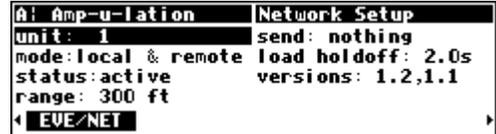

A: Amp-u-lation	Network Setup
unit: 1	send: nothing
mode: local & remote	load holdoff: 2.0s
status: active	versions: 1.2,1.1
range: 300 ft	
◀ EVE/NET ▶	

EVE/NET is a sophisticated system, and it is suggested that users do not change ANY settings from their defaults until they are confident that they fully understand its operation. These controls should be viewed as being present in order to enable experts to get the best from the system.

To change H8000s remote settings, hit the SETUP key until you see the EVE/NET label above a softkey. Hit this softkey to bring up the EVE/NET screen shown to the right. Note that this screen is only visible on H8000s with EVE/NET capability.

unit:

Allows you to set the unit number of your H8000. This may be between 1 and 4.

mode:

Determines whether your H8000 can be controlled locally (by use of its front panel), remotely or both. This is mainly used to protect the H8000 from being changed unexpectedly.

If mode is set to local only, the H8000 will not be visible to any connected remote, while if mode is set to remote only, the front panel will be locked out.

If the H8000 is inadvertently set to remote only, front panel control may be restored by holding down the SETUP key for a few seconds.

status

This indicator shows the status of the H8000's EVE/NET connection. This will be one of:  
off-line - the system is either set to local only, or there are no other functioning EVE/NET systems connected.

idle - there are other EVE/NET nodes connected, but this H8000 is not being controlled by any of them.

active - this H8000 is currently being controlled by a remote.

passive - this is one of multiple H8000s being controlled by a remote. This means that it has the same unit number as one or more other H8000s.

range

This is the approximate maximum total length of the EVE/NET cable. Greater values will cause slower screen updates, whereas smaller values will be less tolerant of installation and configuration problems. **All connected nodes must have the same range setting. It is recommended that the default value of 300 ft is used, and that this value not be changed.** If one or more units have a different range settings, error message screens will be seen and general performance will be reduced - this is a possible sign that a range value has been set incorrectly.

➤ *How to set the range for the remote on page 11.*

# EVE/NET Remote User Manual

send

This determines what information may be sent over EVE/NET by this H8000. This will be one of:

nothing - the H8000 is used as an EVE/NET slave device only.

keys - key strokes will be sent out and received by any other H8000 with the same unit number. This allows one H8000 to control another.

☞ *Using one H8000 to control another on page 4.*

MIDI - any MIDI dumps (SETUP/DUMP/MIDI) will be sent out and received by any other H8000 with the same unit number. This allows one H8000 to download presets etc. to another. It must also be enabled if the MIDI out sockets on the remote are to be used.

keys & MIDI - sends both.

☞ *Using MIDI with the remote on page 11.*

load holdoff

This determines the time in seconds that one of the encoder buttons must be held down for before a stored setup is loaded. This should be set longer if the encoder buttons are also used as controllers.

☞ *Extra controller options with EVE/NET on page 4.*

☞ *Loading Setups on H8000 using the Encoder Buttons on page 10.*

versions

This displays the hardware/software version numbers of the connected remote. The first is that of the panel assembly, the second that of the encoder assembly. These values will be inconclusive if more than one remote is controlling the H8000. This information is mainly of interest to service personnel.

## Using one H8000 to control another

Using EVE/NET, it is possible for one H8000 to control another, so that they operate in tandem. For this to make sense, both H8000s should have the same version of software installed, and any User Presets saved should be the same on each. When this is desired, it is best to set one H8000 as the master (sending keys) and the other(s) as slaves (sending nothing). Otherwise much confusion can result.

To enable this, do the following:

- set the unit numbers on the H8000s to the same value.
- set the master H8000 to send keys or send keys & MIDI.
- set the slave H8000s to send none.
- On the master H8000, load the desired presets. This will both make sure that all the H8000s are running the same preset, and make sure that they are displaying the same screens, i.e. they are in step.

Now, the slave H8000s will follow the master H8000, and, for example, two four channel systems will act as an eight channel system.

# EVE/NET Remote User Manual

## Extra controller options with EVE/NET

When an H8000 is being controlled by a remote, a number of extra *controller* options appear on the controller (*mod con* or *assign*) setup screens. These can be used to add further remote control options for preset or system parameters.



➤ See H8000 User Manual for more information on Controllers.

The choice of extra controllers will vary with the remote, but usually include:


- user key                      the USER key on the remote panel.  
➤ The remote panel on page 8.
- joy wheel 1-4                joysticks connected to the remote's joystick connector.
- joy button 1-4               buttons on joysticks connected to the remote's joystick connector.  
➤ Using a Joystick on page 10.
- encoder but 1-8              buttons on the remote's encoder knobs. These may be useful as triggers or extra push buttons. If these are to be used, set load holdoff to a high enough value that stored setups will not be loaded accidentally.

Loading Setups on H8000 using the Encoder Buttons on page 10.

If one of these extra controllers is used to remote control a preset or system parameter, and the system is powered down, and later powered up without a remote being connected, it will be displayed as unavailable until the H8000 is next selected by a remote.

# EVE/NET Remote User Manual

## Making Connections to the Remote

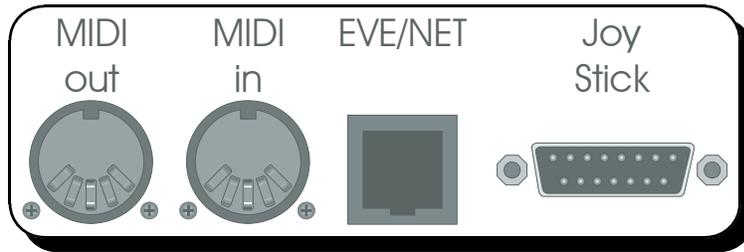

At the back of the remote are four connectors, as shown above. Only the EVE/NET connector is required to be connected, the use of rest is optional.

➤ See Appendix A for pin out information for these connectors.

### EVE/NET

This requires an 8 pin RJ45 for connection to the EVE/NET network. Power for the remote is also supplied by this connection. For a *simple system*, all that is required is to use the supplied cable to connect between this connector and the similar one on the back of the H8000.

➤ See Appendix B for further installation and EVE/NET connection information

### Joy Stick

This is a 15 pin female D-type connector wired as a standard PC game port connector. It will support a standard PC type joystick (or two joysticks with a suitable adaptor) .

➤ See Using a Joystick on page 10.

### MIDI in

This is a 5 pin DIN type connector that can be used as MIDI in, or combined MIDI in and MIDI out.

➤ See Using MIDI with the remote on page 11.

### MIDI out

This is a 5 pin DIN type connector that can be used as MIDI out. There is no MIDI thru' connector.


➤ See Using MIDI with the remote on page 11.

# EVE/NET Remote User Manual

## The Remote Panel

The remote panel is similar to that of an H8000, with some repositioning of the existing buttons, and the following additions:

- UNIT button at left.
- Eight UNIT indicators at left.
- USER key at left.
- Eight encoder knobs at the bottom

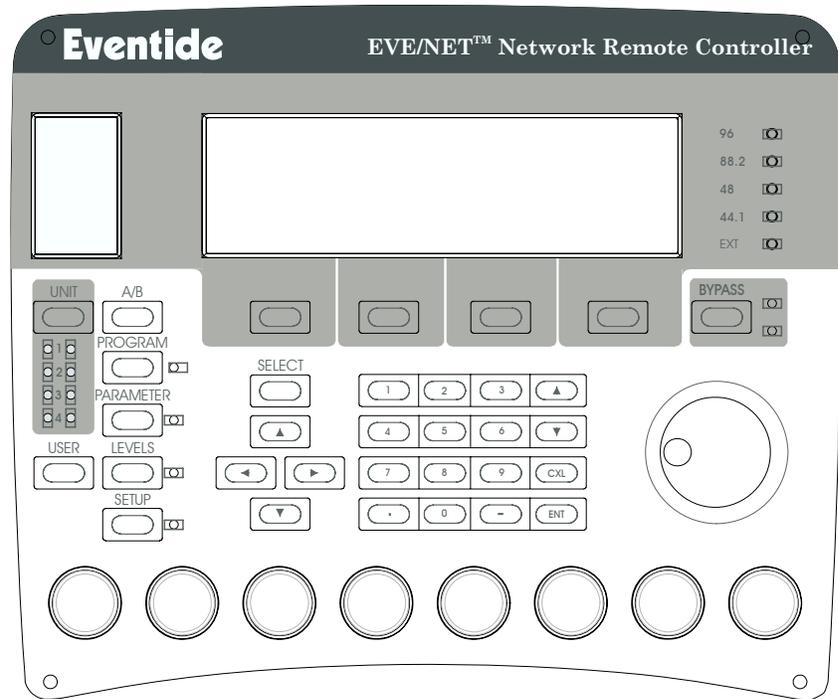

### UNIT button

This allows the user to select which of the connected H8000s it will control. It operates by cycling through the unit numbers of the connected H8000s, and has no effect when either no H8000s are connected, or when all connected H8000s have the same unit number. The selected unit number is shown on the indicators below the button.

➡ To see how to set an H8000's unit number, see page 3.

It is important to realize that one is selecting a unit number to which one or more H8000s may be set, rather than selecting a specific H8000. This is why the text sometimes refers to *units* (meaning one or more H8000s set to a specific unit number) rather than *H8000s*.

### UNIT indicators

These show the connected units (green in right column) and the selected unit number (red in left column). When the system is first powered up, each remote will select the lowest numbered connected unit, or units if more than one H8000 is set to the lowest number.

If a unit is explicitly selected by using the UNIT button above, this will stay selected, even if it goes off-line (usually because it was powered down or disconnected). This is necessary so that the remote user is made aware that the unit he was controlling is no longer connected.

If either no functional H8000 is connected (no green indicator lit), or the selected unit has gone off-line (green indicator beside illuminated red indicator is not lit), the off-line screen at the right will be visible.



# EVE/NET Remote User Manual

## USER key

This is a general purpose key that can be used as a source for a controller.

➤ *Extra controller options with EVE/NET on page 3.*

## Encoder Knobs

These are general purpose controllers, comprising a knob, an LED indicator ring around it to show the knob position, and a switch which is operated by pushing down on the knob.

The knobs are used to control the on-screen parameters, as shown below (knobs numbered from left to right):

	<b>A! Amp-u-lation</b>	<b>Machine A Levels</b>		
knob 1→	<b>A OUT1 Wet/Dry 100%</b>	<b>A OUT1 Level 0.0dB</b>	←knob 5	
knob 2→	<b>A OUT2 Wet/Dry 100%</b>	<b>A OUT2 Level 0.0dB</b>	←knob 6	
knob 3→	<b>A OUT3 Wet/Dry 100%</b>	<b>A OUT3 Level 0.0dB</b>	←knob 7	
knob 4→	<b>A OUT4 Wet/Dry 100%</b>	<b>A OUT4 Level 0.0dB</b>	←knob 8	
	<b>dsp A</b>	<b>meter</b>	<b>inputs</b>	<b>output</b>

- The encoder knobs always control the parameters on the displayed screen - they do not need to be assigned before use.
- When you turn a knob, the cursor will move to the parameter that is being changed. This can be distracting if you try to change more than one at a time.
- Once the cursor has moved to a parameter, this parameter is now *selected*, and can be changed by means of the main wheel or, where appropriate, the numeric keypad.
- Each click on the knob corresponds to the *resolution* of the parameter, i.e., the amount the parameter will change for one press of the up/down arrows on the right of the numeric keypad. For some parameters, this may be too fine - use the main knob instead.
- *See the Programming Manual to see how to change the resolution of a parameter in a preset. System parameters cannot be changed.*
- The indicator ring shows the current setting of the knob, with the bottom left indicator being the minimum possible value, and the bottom right being the maximum value. Since there may be more 'clicks' over the entire control range that there are indicator lights, the indicator will not always change for each click of the knob.
- If there is no on-screen parameter corresponding to a given knob, or it is not variable, the indicator ring for that knob will be off.

## Encoder Buttons

These may be used for either of two purposes:


- 1) As general purpose controller buttons.
  - *Extra controller options with EVE/NET on page 3.*
- 2) To load setups on the controlled unit.
  - *See H8000 User Manual for more on setups.*
  - *See below to see how to set this up..*

# EVE/NET Remote User Manual

## Loading Setups on H8000 using the Encoder Buttons.

A complete setup, including presets and routing, on a controlled H8000 may be loaded with one press of an encoder button. This is a significant time saver for the busy operator.

To save the current setup under an encoder button, press it and hold it until you see the message at right.

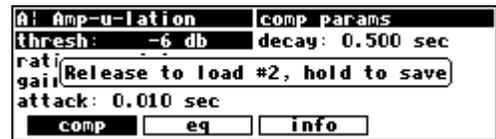

If you release the button immediately, the operation will be canceled, and the previous setup saved under that button (if any) will be loaded.

If instead, you keep it held down longer, you will see the “saving” message, and the setup will then be saved, overwriting any previous setup saved under that button..



When a setup is saved under an encoder button, the names of its presets will be displayed when the button is first pressed. If the button is immediately released, the setup will not be loaded.



These setups are saved as normal user setups, given the name “button\_1”, “button\_2” etc. As a result, they can be deleted, updated or renamed in the normal way.

☞ See *H8000 User Manual* to learn about saved setups.

The time that you have to hold down the encoder button before getting the “release to load” message is known as the *load holdoff* time, and is set at the H8000. This should be set long enough so that you do not load setups accidentally by leaning on a button (or a visitor saying “what does this do”..) The default is two seconds. In addition, if you are also using the buttons as a source for a *controller*, you will want it to be long enough that you can make the distinction between these two operating modes (press and release quickly as a control, press and hold to load).

☞ See how to set the *load holdoff* time on page 4.

## Using a Joystick

A standard PC type joystick can be plugged into the 15 pin socket on the back of the remote. This socket will accept two joysticks, given a suitable cable adaptor. Such joysticks and adaptors are readily available from computer stores.

These joysticks usually operate in the X and Y axes, and have up to four push buttons. The remote will support two X/Y joysticks and four push buttons as *controller* inputs. See Appendix A for further information on connecting joysticks.

☞ Extra controller options with EVE/NET on page 3.

☞ See *H8000 User Manual* for more information on Controllers.

It is important to be aware that some features of the more complex joysticks may require extra software (drivers) on the PC to support them - since the remote is not a PC this software will not be useable. As a result, it is best to use a simple analog joystick, or a more complex one that is capable of emulating an analog joystick without extra software.

# EVE/NET Remote User Manual

## Using MIDI with the remote

The MIDI connections on the remote are routed over EVE/NET to the connected units. This means that an external MIDI controller (e.g. keyboard, joystick) can be plugged into the remote, and it will act upon the units that the remote is controlling, just as if it were directly plugged into the H8000s.

Similarly, if send MIDI is set on any of the controlled units, any MIDI messages or dumps sent by them will be available at the remote.

➤ *Send MIDI on page 3.*

## Configuring the remote

The remote normally requires little or no configuration - facilities are provided to adjust screen brightness and contrast, change EVE/NET range settings, and perform various self-tests. To enter configuration mode, hold down the UNIT key for about a second until you see the main menu on the right.

This menu gives you the following options, which can be selected by pressing the appropriate numeric key as shown on the screen:

### Initialize

This returns all remote settings to their default values. In the event of serious problems, it should be used to return the remote to a known state.

### Display

This allows you to use the knob to change the brightness and contrast settings for the screen, as well as the encoder LED brightness settings.

```
** EVE/NET Remote V1.2
1: panel test      2: joysticks
3: set range      6: display
8: MIDI loop      9: initialize
any other key to continue
```

### Set Range

This allows the maximum operating range (cable length) of the remote to be changed. **It is recommended that it NOT be changed, and be left at the default value of 300 ft.** All remotes and H8000s connected to an EVE/NET network **MUST** have the same range setting, or system performance will be seriously degraded and error messages will be shown.

If a remote is perpetually off-line and showing repeated error messages as shown by the screen on the right it may be that its range setting is different from others on the network - this can be checked by trying different range settings to see if the problem can be resolved. Hint - the remote or H8000 with the longer range setting is most likely to give error messages.



# EVE/NET Remote User Manual

## Joysticks

This displays the values read from the joystick and the names of any joystick buttons pressed. This is useful to confirm joystick functionality, and also to see which button is which. A smoothing value can be set, which is helpful for noisy joysticks.

## Panel Test

This is used to test the switches and LEDs on the panel. The LEDs will light in sequence, and the names of any keys pressed will be displayed on the screen. The value of the wheel will also be displayed.

### Note:

- 1) **There is no exit from this test** - the remote must be powered down and then up to return to normal operation.
- 2) This does not include the encoders - to test these, hold down an encoder button at power up - their encoder rings will then cycle, and freeze at 12-o'clock when a button is pressed. Power down to return to normal operation.

## MIDI Loop

This test procedure requires that a "loop-back" cable be connected between the remote's MIDI in and out connectors. It is used to test the MIDI hardware.

# Appendix A - Connections

## Rear panel connections

### Joystick Connector - 15 pin DIN

1 +5V DC	6 Joystick 1 - Y	11 Joystick 2 - X
2 Button 1	7 Button 2	12 do not connect
3 Joystick 1 - X	8 +5V DC	13 Joystick 2 - Y
4 Ground	9 +5V DC	14 Button 3
5 Ground	10 Button 4	15 do not connect

#### Notes:

1. The 5V DC is not fused and should only be used to power a joy stick or other low power devices. No more than 100mA should be drawn. Damage may result to the remote if this is shorted or connected to any other power source.
2. Buttons are active with a switch closure to ground.
3. The X and Y inputs are suitable for a 10K ohm potentiometer connected between +5V and ground, or may be used for extra switches, with external 10K pull-ups to +5V and closure to ground.

### MIDI in connector - 5 pin DIN

1 MIDI TX +
2 MIXI TX -
3 no connect
4 MIDI RX +
5 MIDI RX -

### MIDI out connector - 5 pin DIN

1 no connect
2 no connect
3 chassis ground
4 MIDI TX +
5 MIDI TX -

### EVE/NET Connector - 8 way RJ-45

	<i>EVE/NET Function</i>	<i>Network T568A</i>	<i>Network T568B</i>	<i>Network 10 base-T</i>	<i>Telephone</i>
1	Power +	White/Green	White/Orange	White/Blue	Grey
2	Common	Green	Orange	Blue	Orange
3	Signal +	White/Orange	White/Green	White/Orange	Black
4	Power +	Blue	Blue		Red
5	Power +	White/Blue	White/Blue	Orange	Green
6	Signal -	Orange	Green		Yellow
7	Common	White/Brown	White/Brown		Blue
8	Common / Chassis Ground	Brown	Brown		Brown

# Appendix B - Installation

**This section is intended for for qualified technicians involved in installing EVE/NET systems. The information it contains is not required in order to understand the operation or use of the system.**

## Installation

The EVE/NET system is derived from a well-proven networking system designed for industrial use, with over ten million systems installed. As a result it is very rugged and tolerant of faults and poor configuration. Notwithstanding the above, the configuration and subsequent successful operation of an EVE/NET system is assisted by understanding the following parameters.

1. *Range Settings*
2. *Cabling*
3. *Termination*
4. *Power*
5. *Grounding*

### Range Settings

Each EVE/NET peripheral has a *range* setting that governs both the maximum cable length and the communication speed. These are: 50 ft (fastest) and 1200 ft (slowest). The default and recommended setting is 300 ft. At slower range settings, the screen update time will be more noticeable, at faster range settings, correct cabling and configuration is more important. Note that the maximum distance is governed more by the speed of light than by the cable quality, so the maximum length for a given setting should not be exceeded. All systems connected by the same cable must have the same range setting. Non-communication, permanent off-line indications or frequent error reports may be a sign of incorrect range settings.

### Cabling

There are two issues to consider when cabling an EVE/NET network:

- i. **Topology** - this is the way the EVE/NET *nodes* are connected. (A *node* is either a remote console or an EVE/NET equipped effects processor.) The nodes **must** be connected in a “daisy-chain” pattern, so that the cable goes from A to B to C to D etc. They **may not** be connected in a “star” pattern, where the cable goes from A to B and A to C and A to D, etc.
- ii. **Cable Type** - EVE/NET requires eight way RJ-45 type cabling and connectors. All eight pins must be connected to the same numbered pins on each connector. Telephone-type T-adaptors may be used as long as the common plug is connected directly to the EVE/NET socket.

For short runs or temporary hookups, RJ-45 type telephone leads can be used. For long runs, especially when the total length approaches the “range” limit (see below), CAT-5

# Appendix B - Installation

network grade cable should be used. This should be wired to the same standards as a 10 MB/s Ethernet system.

☞ *See Appendix A for pin connections, color codes etc.*

NOTE (1): An EVE/NET system must not be connected to any other networking system, as damage and incorrect operation may result.

NOTE (2): When using manufactured leads, be sure to check that the connections are not reversed (as in a “cross-over” cable). Hold the two ends side by side, facing the same way, and confirm that the color order of the wires is the same.

## Termination

The first and last *nodes* on the “daisy-chain” must have termination resistors connected. All others must have termination resistors disconnected. This is done by installing or removing jumpers on the printed circuit boards (see Appendix C for details). As delivered, the default setting is for termination to be applied on all *nodes* - this will have to be changed for systems using more than two *nodes*. The EVE/NET system will usually tolerate some redundant or missing termination, but the rule should be followed for permanent installations and greatest reliability.

## Power

Since the remote consoles have their power supplied down the EVE/NET cable, this requires some consideration. A single H8000 can power a single remote console, while a DSP7000/7500 requires an external power supply. (Note that early H8000s, identifiable by having only two transformer mounting holes on the right hand side panel rather than the three on later systems, also require an external power supply.) Allowing multiple H8000s to power the same line in effect connects their power supply outputs in parallel, and can cause overheating or other damage.

Thus a *simple system* involving a single H8000 and a single console may use just the supplied RJ45 cable and default jumpering.

***A more complex configuration must be designed rather than just hooked up.***

Power supplied from an H8000 may be disconnected by removing the 1A fuse near the RJ45 socket.

Eventide can supply a small power adaptor that is capable of powering two remote consoles, and has useful power and termination options. This is provided as part of the DSP7x00 Installation Kit and is also available separately.

☞ *See the sample layouts in Appendix C for examples.*

# Appendix B - Installation

## Grounding

Since the remote consoles are powered down the EVE/NET cable, it follows that their electrical grounds are also connected down this cable. As connected H8000s and DSP7x00s will usually also be grounded, it follows that care must be taken to avoid ground loops when more than one effects unit is being controlled. The EVE/NET circuitry in each effects unit is opto-isolated, allowing ground connections to be removed. This is done by the use of printed circuit board jumpers.

➤ *See Appendix C for board configuration details.*

Similarly, for reasons of electrical safety and RFI reduction, remote systems require chassis ground connections. To avoid ground loops, this connection should only be made at one place.

➤ *See the sample layouts in Appendix C for examples.*

# EVE/NET Remote User Manual - Index

---

C

**cross-over cable, 15**

---

E

**encoder**

- buttons, 10
  - buttons as controllers, 6
  - knobs, 9
- 

G

**Grounding, 16**

---

J

**joy stick**

- connector, 7
  - testing, 12
  - using, 10
- 

L

**load holdoff, 10**

- setting on H8000, 5
- 

M

**MIDI**

- connector, 7
- sending from H8000, 5
- test procedure, 12
- using with the remote, 11

**mode**

- setting on H8000, 4
- 

N

**node, 4**

- definition, 3
- same range setting, 4

**nodes, 15**

---

O

**off-line screen, 8**

---

R

**range**

- setting for H8000, 4

Document 141044

Release 1.1 Page 17 of 20

setting for remote, 11

---

S

**simple system, 4, 7, 15**

- definition, 3
- 

T

**Termination, 15**

---

U

**unit**





- button, 8
- indicators, 8

**unit number, 4**

- definition, 3
- same, 4
- selection from remote, 8

**USER key, 9**

# Appendix C - Configuration Examples

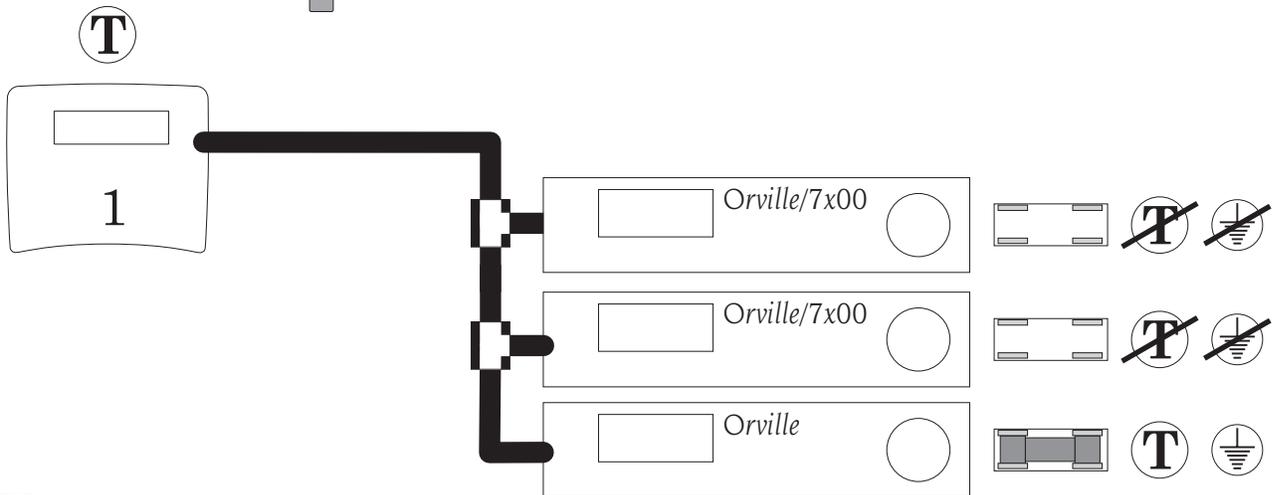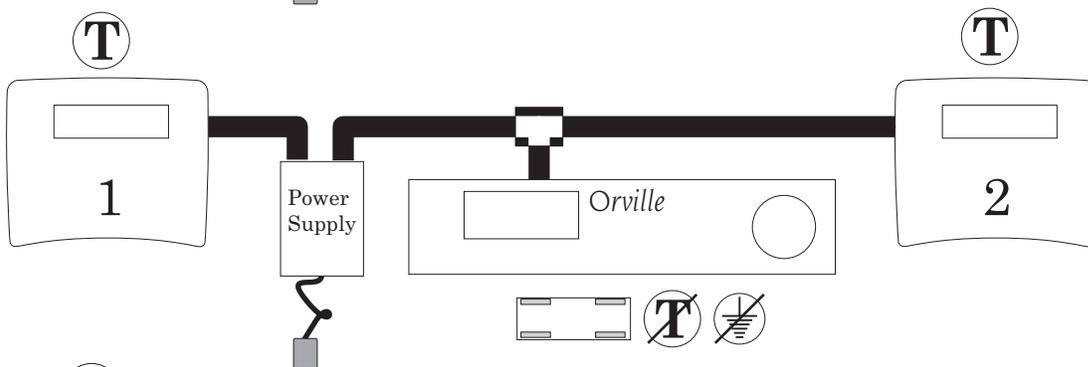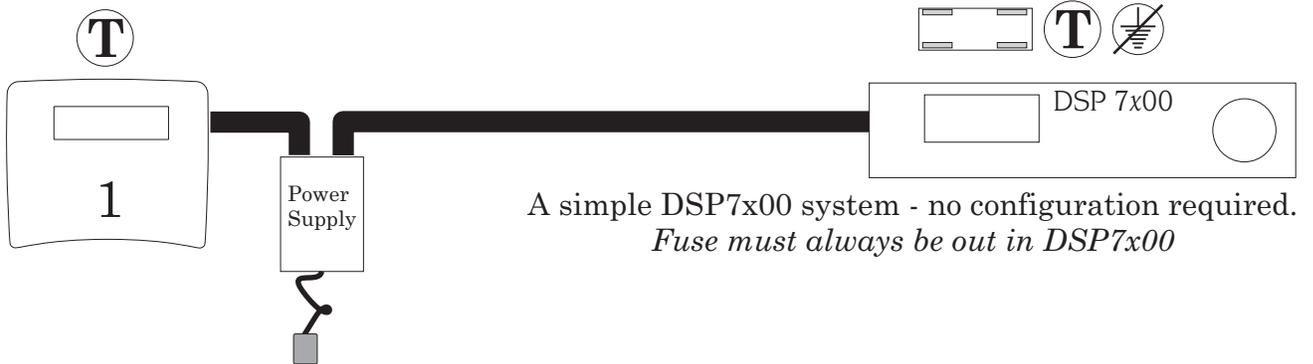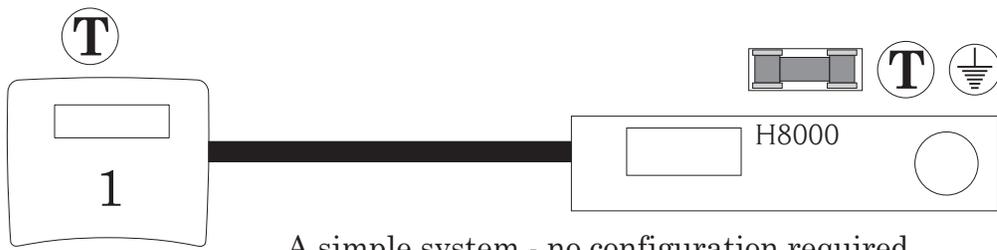

## Key

- |  |                             |  |                    |  |  |                         |
|--|-----------------------------|--|--------------------|--|--|-------------------------|
|  | Terminator jumper installed |  | Fuse installed     |  |  | Ground jumper installed |
|  | Terminator jumper removed   |  | Fuse not installed |  |  | Ground jumper removed   |


# Appendix C - Hardware Configuration

In order to configure an EVE/NET node you must first identify it. Orvilles and 7000/7500's will be one of two types:

- 1) With RJ45 EVE/NET socket mounted on motherboard.
- 2) With RJ45 EVE/NET socket mounted on plug-in option card.

H8000's are always type (1)


## Motherboard-type configuration

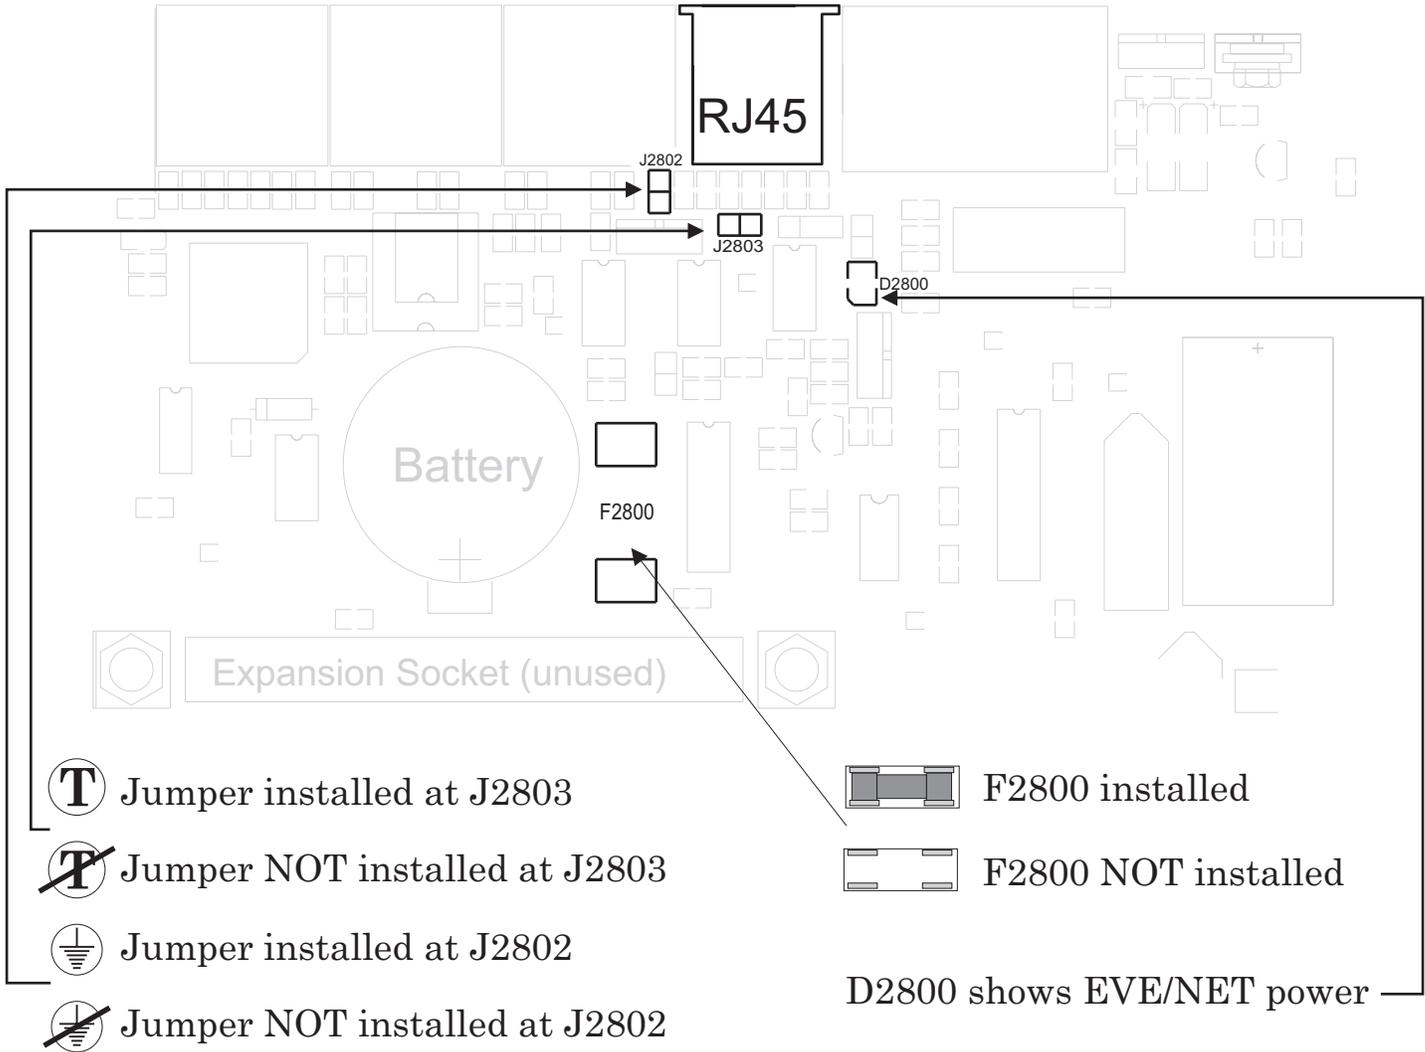

Factory Defaults:				
H8000, Orville		<b>T</b>		J2800,2801: OUT J2802,2803: IN
DSP7000/7500		<b>T</b>	<del></del>	J2800,2801,2802: OUT J2803: IN


# Appendix C - Hardware Configuration

## Option board configuration

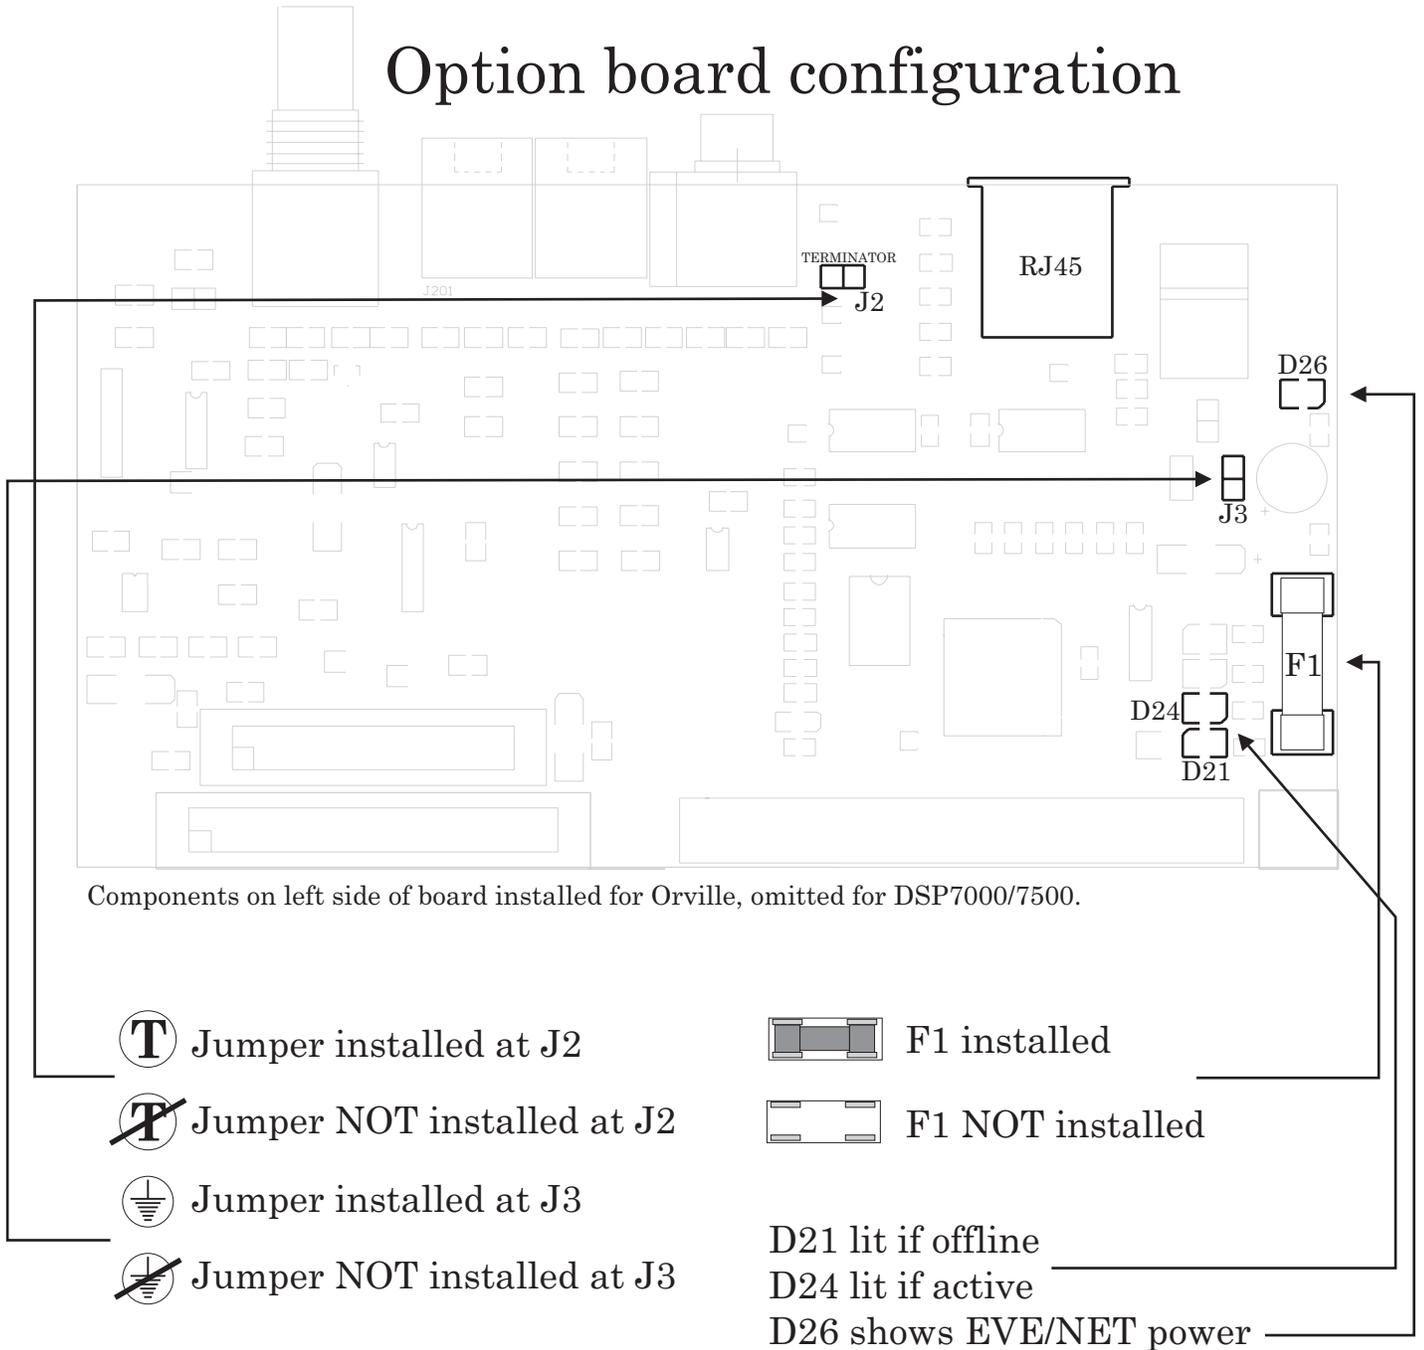

### Factory Defaults:

 Orville



DSP7000/7500

